

B SERIES

Pull Out Wardrobe Basket (Shallow)

for 600/900mm cabinet widths

Parts List


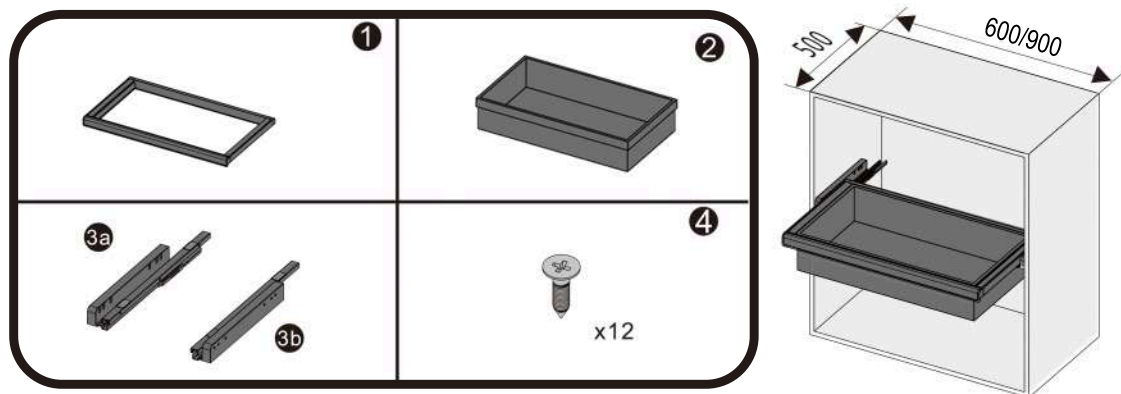





Illustration for Drilling

- 1 Drill 12 holes with $\varnothing$ of 2.5mm each side.

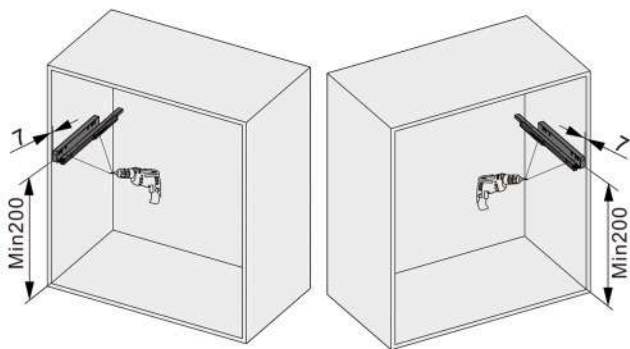


Slider Installation

- 2 Affix the left and right sliders using 12pcs of screws.

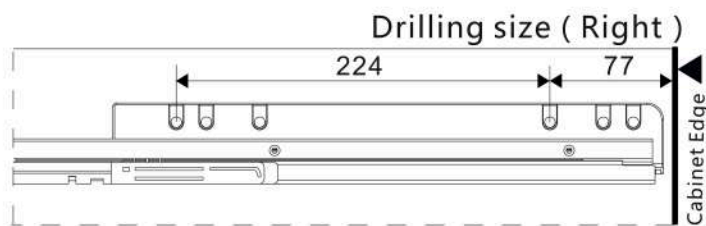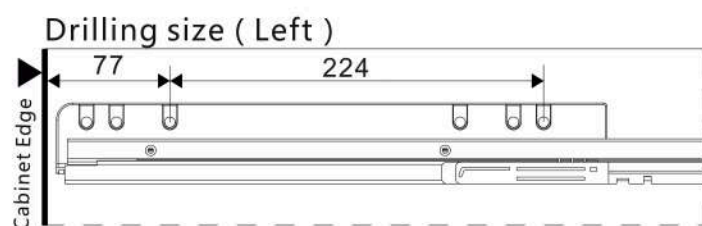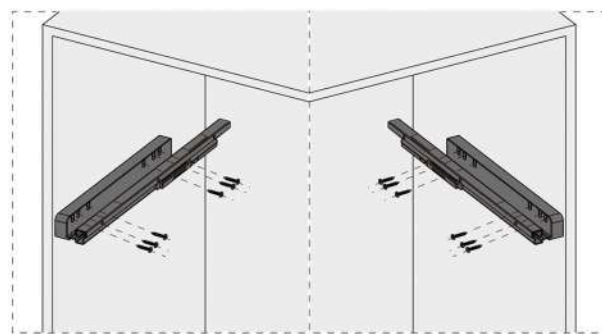

Frame Assembly

- 3 Hold the frame at the illustrated angle (3.1) and push to the sliders (3.2).

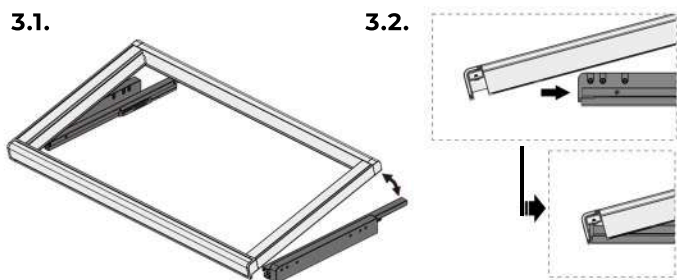

Tray Assembly

- 4 Place the storage tray inside the frame.

